

## **USER MANUAL**

Mighty6 Line Array Speaker
Mighty6SUB Line Array Subwoofer Speaker





## **GENERAL INFORMATION**

Thank you very much for your choice of loudspeaker product for your application!

In order to feel assured that you have gained a good grasp of every feature provided by your new unit, owner's manual should be read in its entirety.

The manual should be saved and kept on hand as a convenient reference.

## Introduction

Mighty6 series active line array adjustable angle design, coaxial design to avoid abnormal near field sound quality, special waveguide technology, greatly reducing midrange interference, unique FIR filter technology to keep the phase consistency of each frequency band.

### Contents

GENERAL INFORMATION	2
SAFETY GUIDELINES	3
PRODUCT ANNOUNCEMENT	6
ACCESSORIES	7
CONFIGURATION	8
INSTALLATION & CONNECTION	12
FUNCTION INSTRUCTION	16
SPECIFICATION	18
CEDTIFICATE	10

# SAFETY GUIDELINES

INSTRUCTIONS FOR THE PREVENTION OF FIRE, ELECTRIC SHOCK, OR INJURY TO PERSONS					
About WARNING and CAUTION Notices			About the Symbols		
WARNING	Used for instructions intended to alert the user to the risk of death or severe injury should the unit be used improperly.		A	This symbol alerts the user to important instructions or warnings.	
CAUTION	Used for instructions intended to alert the user to the risk of injury or material damage should the unit be used improperly.		0	This symbol alerts the user to items that must never be carried out (are forbidden).	

## ALWAYS OBSERVE THE FOLLOWING

	WARNING	WARNING
A	Before using this unit, make sure to read the instructions below, and the Owner's Manual.	Use only the attached power-supply cord. Also, the supplied power cord must not be used with any other device.
0	Do not open (or modify in any way) the unit or its AC adaptor.  Do not attempt to repair the unit, or replace parts within it(except when this manual provides specific instructions directing you to do so). Refer all servicing	Do not excessively twist or bend the power cord, nor place heavy objects on it. Doing so can damage the cord, producing severed elements and short circuits. Damaged cords are fire and shock hazards.
	to your retailer or the nearest authorized Service Center.	This unit, either alone or in combination with an
0	Never use or store the unit in places that are:  • Subject to temperature extremes(e.g., direct sunlight in an enclosed vehicle, near a heating duct, on top of heat-generating equipment); or are  • Damp and humid(e.g., baths, washrooms, on wet floors); or are	amplifier and headphones or speakers, may be capable of producing sound levels that could cause permanent hearing loss. Do not operate for a long period of time at a high volume level, or at a level that is uncomfortable. If you experience any hearing loss or ringing in the ears, you should immediately stop using the unit, and consult an audiologist.
	<ul><li>Exposed to rain; or are</li><li>Dusty; or are</li><li>Subject to high levels of vibration.</li></ul>	Do not allow any objects (e.g., flammable material, coins, pins); or liquids of any kind (water, soft drinks, etc.) to penetrate the unit.
<b>A</b>	Make sure you always have the unit placed so it is level and sure to remain stable. Never place it on stands that could wobble, or on inclined surfaces.	Immediately turn the power off, remove the AC adaptor from the outlet, and request servicing by your retailer or the nearest authorized Service Center when:
A	Be sure to use only the AC adaptor supplied with the unit. Also, make sure the line voltage at the installation matches the input voltage specified on the AC adaptor's body.	The AC adaptor, the power-supply cord, or the plug has been damaged; or  If smoke or unusual odor occurs  Objects have fallen into, or liquid has been spilled onto the unit; or  The unit has been exposed to rain (or otherwise has become wet); or  The unit does not appear to operate normally or exhibits a marked change in performance.

# SAFETY GUIDELINES

### ALWAYS OBSERVE THE FOLLOWING

WARNING	CAUTION	
Protect the unit from strong impact. (Do not drop it!)	Try to prevent cords and cables from becoming entangled. Also, all cords and cables should be placed so they are out of the reach of children.	
Do not force the unit's power-supply cord to share an outlet with an unreasonable number of other devices.	Never climb on top of, nor place heavy objects on the unit.	
Be especially careful when using extension cords-the total power used by all devices you have connected to the extension cord's outlet must never exceed the power rating (watts/amperes) for the extension cord.	Never handle the AC adaptor or its plugs with wet hands when plugging into, or unplugging from, an outlet or this unit.	
Excessive loads can cause the insulation on the cord to heat up and eventually melt through.	Before moving the unit, disconnect the AC adaptor and all cords coming from external devices.	
Before using the unit in a foreign country, consult with your retailer or the nearest authorized Service Center.	Before cleaning the unit, turn off the power and unplug the AC adaptor from the outlet.	
Batteries must never be recharged, heated, taken apart, or thrown into fire or water.	Whenever you suspect the possibility of lightning in your area, disconnect the AC adaptor from the outlet.	
Only switching off the unit and unplugging from an outlet, the unit is powered off completely.	If used improperly, batteries may explode or leak and cause damage or injury. In the interest of safety, please read and observe the following precautions.  • Carefully follow the installation instructions for batteries, and make sure you observe the correct polarity.	
The unit and the AC adaptor should be located so their location or position does not interfere with their proper ventilation.	<ul> <li>Avoid using new batteries together with used ones.</li> <li>If a battery has leaked, use a soft piece of cloth or paper towel to wipe all remnants of the</li> </ul>	
Always grasp only the plug on the AC adaptor cord when plugging into, or unplugging from, an outlet or this unit.	discharge from the battery compartment. Then install new batteries. To avoid inflammation of the skin, make sure that none of the battery discharge gets onto your hands or skin. Exercise the utmost caution so that none of the discharge gets near your eyes. Immediately rinse the affected area with running water if any of the discharge has entered the eyes.  Never keep batteries together with metallic objects such as ballpoint pens, necklaces, hairpins, etc.  Dispose of the waste battery according to national or local regulations regarding hazardous waste.	
At regular intervals, you should unplug the AC adaptor and clean it by using a dry cloth to wipe all dust and other accumulations away from its prongs.  Also, disconnect the power plug from the power	Should you remove screws, keep them in a safe place out of children's reach, so there is no chance of them being swallowed accidentally.	
outlet whenever the unit is to remain unused for an extended period of time. Any accumulation of dust between the power plug and the power outlet can result in poor insulation and lead to fire.	Shock hazardous voltages and currents are present inside the enclosure. Do not remove and replace the speaker grill and speaker by any means.	

## **SAFETY GUIDELINES**

#### ALWAYS OBSERVE THE FOLLOWING

#### **IMPORTANT NOTES**

#### Power Supply: Use of Batteries

- Do not connect this unit to same electrical outlet that is being used by an electrical appliance that is controlled by an inverter (such as a refrigerator, washing machine, microwave oven, or air conditioner), or that contains a motor. Depending on the way in which the electrical appliance is used, power supply noise may cause this unit to malfunction or may produce audible noise. If it is not practical to use a separate electrical outlet, connect a power supply noise filter between this unit and the electrical outlet.
- The AC adaptor will begin to generate heat after long hours of consecutive use. This is normal, and is not a cause for concern.
- When installing or replacing batteries, always turn off the power on this unit and disconnect any other devices you may have connected. This way, you can prevent malfunction and /or damage to speakers or other devices.
- Use only suitable rechargeable batteries of the same size and type. Make sure the polarity is correct. Or it may cause this unit to malfunction.
- Please charge the battery as soon as you can when in low energy. The battery's storage capacity goes down if not using it for a long time.

Note: Please charge the battery once a month regularly if not using it for long period.

#### **Placement**

- Using the unit near power amplifier (or other equipment containing large power transformers) may induce hum. To alleviate the problem, change the orientation of this unit; or move it farther away from the source of interference.
- This device may interfere with radio and television reception.
   Do not use this device in the vicinity of such receivers.
- Noise may be produced if wireless communications devices, such as cell phones, are operated in the vicinity of this unit.
   Such noise could occur when receiving or initiating a call, or while conversing. Should you experience such problems, you should relocate such wireless devices so they are at a greater distance from this unit, or switch them off.
- Do not expose the unit to direct sunlight, place it near devices that radiate heat, leave it inside an enclosed vehicle, or otherwise subject it to temperature extremes. Also, do not allow lighting devices that normally are used while their light source is very close to the unit (such as a piano light), or powerful spotlights to shine upon the same area of the unit for extended periods of time. Excessive heat can deform or discolor the unit.

#### **IMPORTANT NOTES**

- When moved from one location to another where the temperature and /or humidity is very different, water droplets (condensation) may form inside the unit, you must allow it to stand for several hours, until the condensation has completely evaporated.
- Do not allow rubber, vinyl, or similar materials to remain on the unit for long periods of time. Such objects can discolor or otherwise harmfully affect the finish.
- Do not paste stickers, decals, or the like to this instrument.
   Peeling such matter off the instrument may damage the exterior finish

#### Maintenance

- For everyday cleaning wipe the unit with a soft, dry cloth or one that has been slightly dampened with water. To remove stubborn dirt, use a cloth impregnated with a mild, non-abrasive detergent. Afterwards, be sure to wipe the unit thoroughly with a soft, dry cloth.
- Never use benzine, thinners, alcohol or solvents of any kind, to avoid the possibility of discoloration and/or deformation.

#### **Additional Precautions**

- Use a reasonable amount of care when using the unit's buttons, sliders, or other controls; and when using its jacks and connectors. Rough handling can lead to malfunctions.
- When connecting/disconnecting all cables, grasp the connector itself-never pull on the cable. This way you will avoid causing shorts, or damage to the cable's internal elements.
- To avoid disturbing your neighbors, try to keep the unit's volume at reasonable levels (especially when it is late at night or near specific places like schools or hospitals).
- When you need to transport the unit, package it in the box (including padding) that it came in, if possible. Otherwise, you will need to use equivalent packaging materials.
- Some connection cables contain resistors. Do not use cables
  that incorporate resistors for connecting to this unit. The use
  of such cables can cause the sound level to be extremely low,
  or impossible to hear. For information on cable specifications,
  contact the manufacturer of the cable.


# PRODUCT ANNOUNCEMENT

## Products in the box


## Products in the box

## Mighty6


## Mighty6SUB

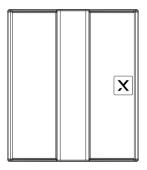


Mighty6 \*1 Manual

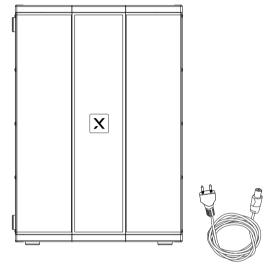

Mighty6SUB\*1 Manual 3M power cable

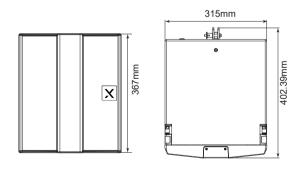

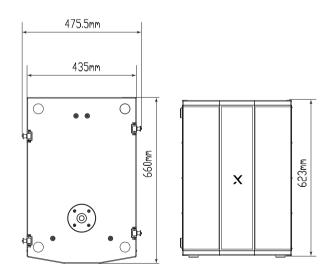

# **ACCESSORIES**



0.6M signal cable



2M signal cable




0.6M power cable



2M power cable





3M power cable

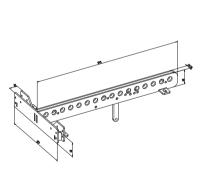



Mighty6 Flybar




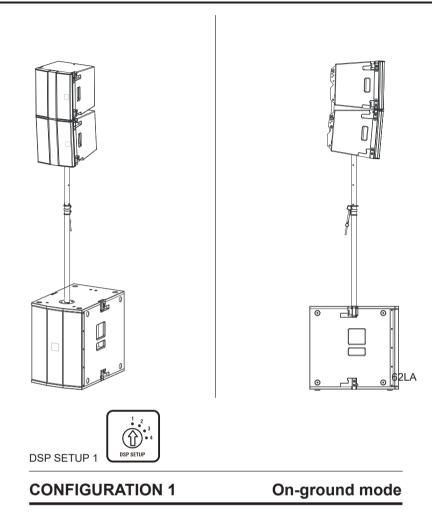


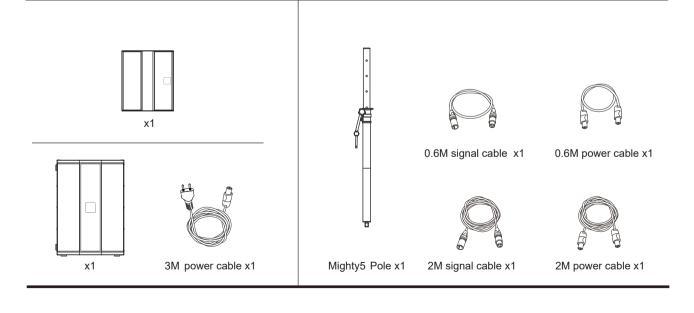


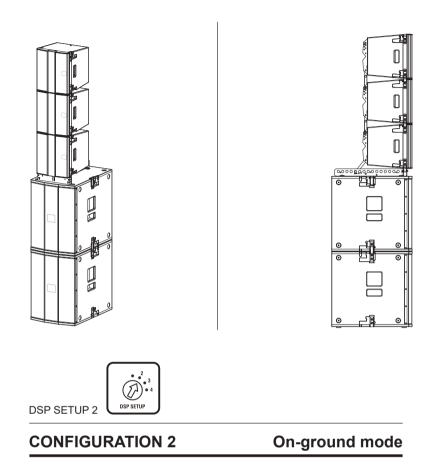

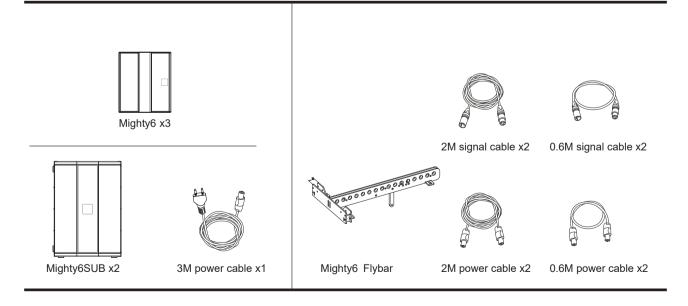

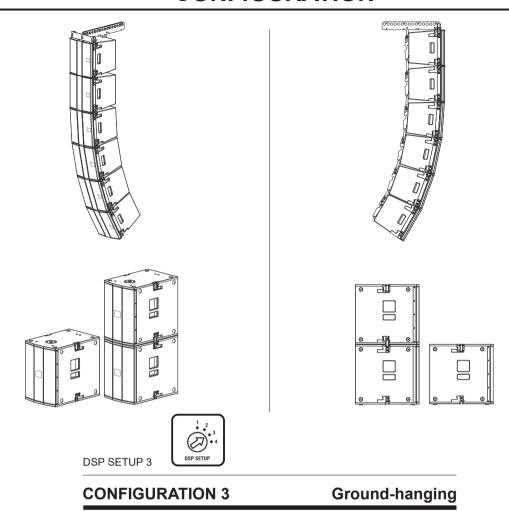


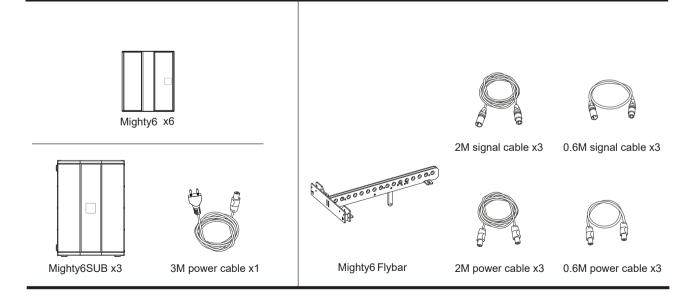

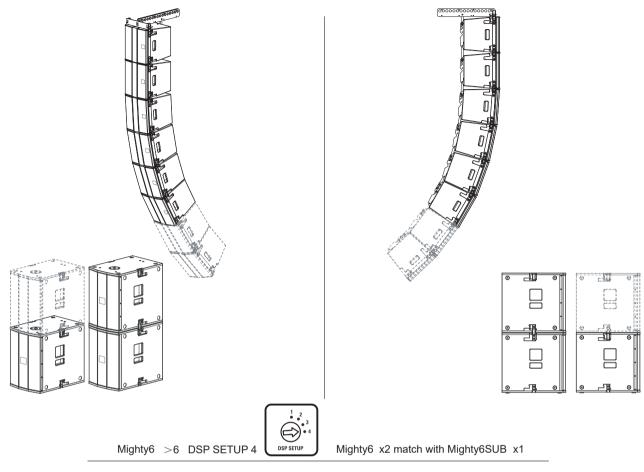


## **CONFIGURATION 4**


## **Ground-hanging**

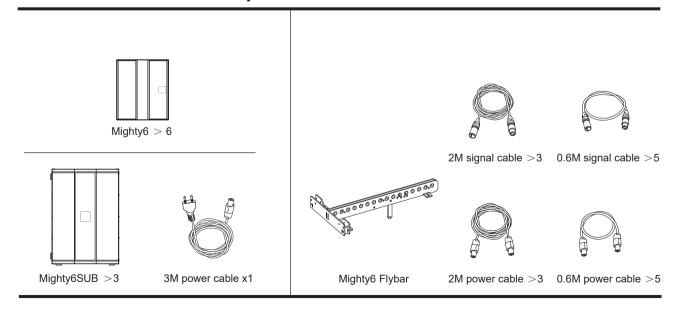


## **INSTALLATION & CONNECTION**

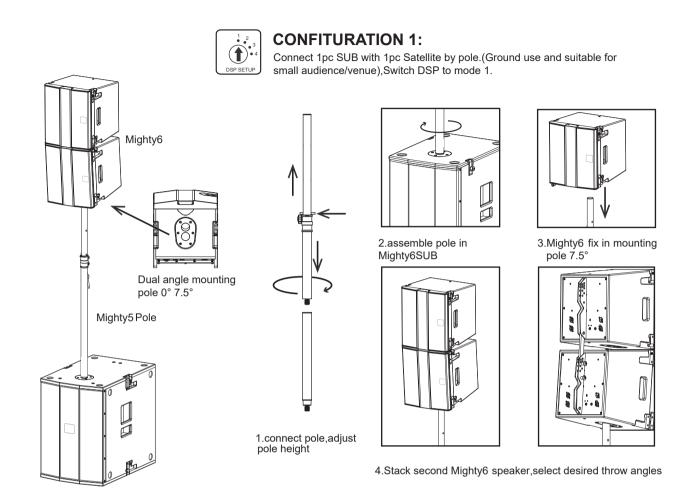


### **POWER AND SIGNAL CONNECT**

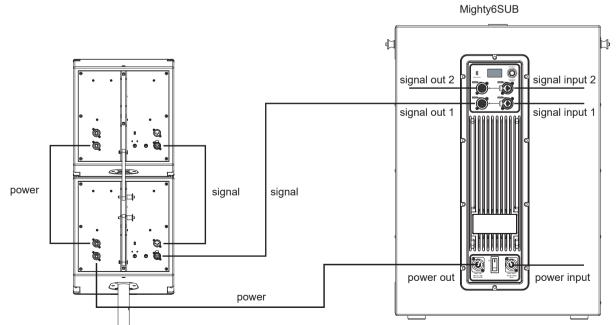


## **INSTALLATION & CONNECTION**

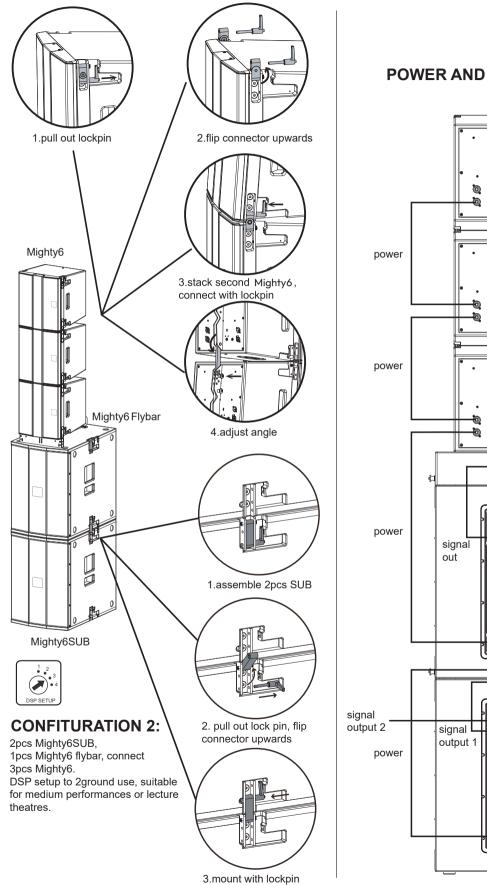


### **POWER AND SIGNAL CONNECT**

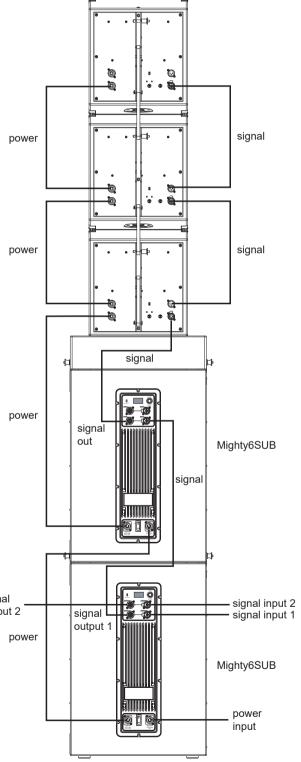


## **INSTALLATION & CONNECTION**

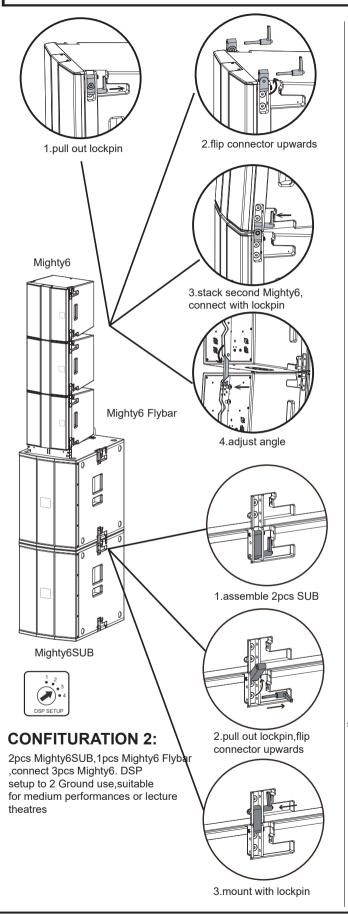

### **POWER AND SIGNAL CONNECT**

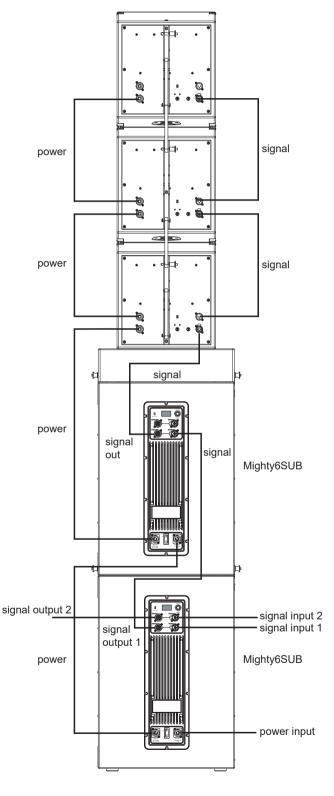


## **INSTALLATION&CONNECTION**

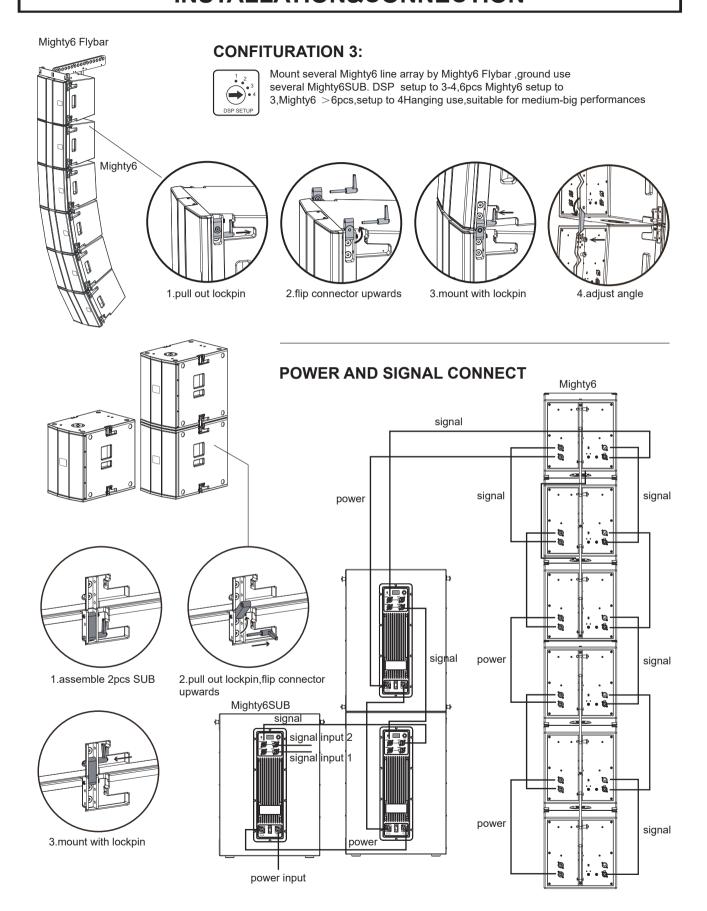

# **Mighty6 FUNCTION INSTRUCTION**

### Overview-Connections&controls

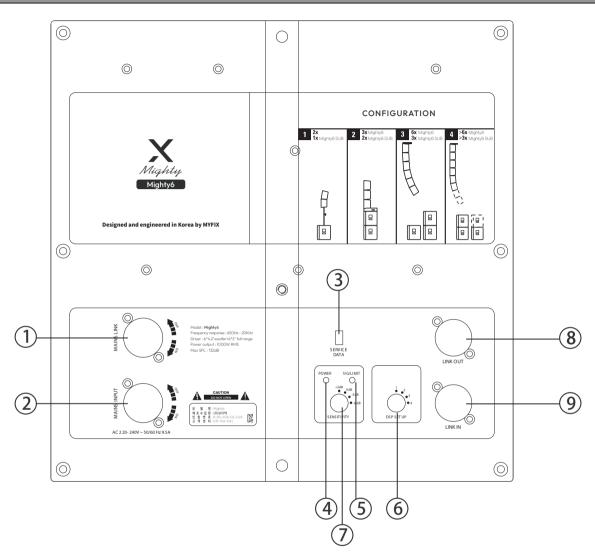

### 1.POWERCON OUT

Connect another speaker power input.

### 2.POWERCON IN

Power input.

### **3.SERVICE DATA**

Only used by SOUND VISION customer service department. Pls don't insert any other USB.

### **4.POWER**

Blue indicates main power.

### 5.SIG/LIMIT

Power input, green indicates signal input, red indicates the internal circuit has tripped.

### **6.DSP SETUP**

4 DSP SETUP.

### 7.SENSITIVITY

Control internal speaker volume(from +3dB to -6dB).


### **8.LINK OUT**

3pin XLR output connector(balanced line-level audio output).

### 9.LINE IN

3pin XLR input connector(balanced line-level audio input).

## Mighty6SUB FUNCTION INSTRUCTION

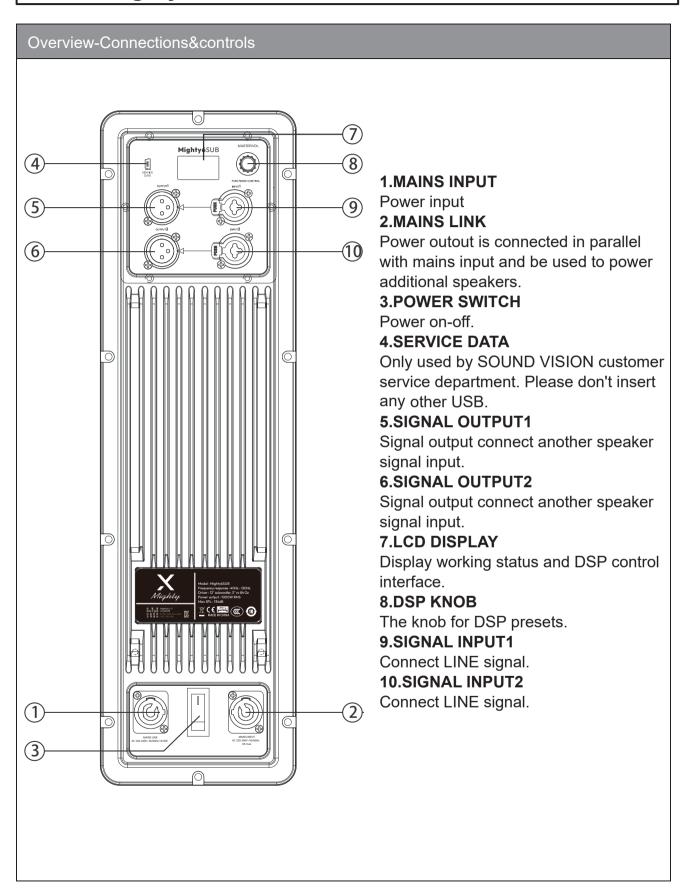

# **SPECIFICATION**

	Mighty6	Mighty6SUB
Туре	2 way active vented design	Acitve vented subwoofer
Frequency Response 65 ~ 20KHz		40 ~ 120Hz
Maximum SPL	132dB	134dB
Crossover Point	630Hz	Selectable 100Hz, 120Hz
Sensitivity input Selectable	+3dBV, 0dBV, -3dBV, -6dBV	-
Driver LF	6 x 4.2"woofer + 6 x 2" full range line array	15" subwoofer, 3" Voice Coil
Dispersion Angle (H x V)	H 120°x V10°	-
Signal Connectors (I/O)	Input : XLR   Output : XLR link	Input: 2 x XLR   Output: 2 x XLR link
Power I/O	POWERCON	POWERCON
Volume	Volume control	Volume control
Amplifier	Class-D	Class-D
Power output (RMS)	LF: 500W + HF: 500W TOTAL 1000W	1000W
Power output (MAX)	LF: 1000W + HF: 1000W TOTAL 2000W	2000W
Feature functions	DSP Setup	LCD with multiple DSP
	Switching power design	Switching power design
	LED power / signal / clip indicator	LED power / signal / clip indicator
	FIR filter design, flat phase curve	Phase switchable (0/180)
		Delay value adjuest, 100ms max
Cabinet	Birch Plywood with polyurea painted finish	Birch Plywood with polyurea painted finish
Grille	1.0mm steel	1.5mm steel
Pole support	Double holes 35mm Steel bottom holder	M20 screw pole
Rigging and handling	Inter-enclosure angles 0,1,2,3,4,6,8,10°	Inter-enclosure angles 0° (Stacking)
Built-in Pin Lock support	5 points	4 points
Flybar support	Flybar+rope	-
Fuse	T4AL 250V	T6.35AL 250V
Operating voltage	AC 220V-240V, ~50/60Hz	AC 220V-240V, ~50/60Hz
Dimensions (H x W x D)	367 x 315 x 402mm	623 x 443 x 660mm
Packed Dimensions (H x W x D)	485 x 430 x 495mm	775 x 575 x 800mm
Net Weight	13.6kgs	37.5kgs
Gross Weight	18kgs/1pc	44kg/1pc





# 제품보증서

**11** ★ 〒 | ★ 는 엄격한 품질 관리와 철저한 검사를 통해 제작된 신뢰할 수 있는 제품입니다. 구매일로부터 보증 기간 내에 예상치 못한 고장이 발생할 경우, 공식 대리점을 통해 소비자 피해 보상 규정에 따라 책임지고 보상하여 드립니다.

고객님의 만족을 최우선으로 생각하며, 최고의 서비스와 품질을 약속드립니다.

무상 A/S - 구입일로부터 1년간 제품의 결함이나 자연발생적인 고장이 발생하였을 경우

유상 A/S - 사용상의 잘못 또는 취급 부주의로 인한 고장 무상보증기간이 지난 경우 소비자의 고의 또는 과실로 인한 고장의 경우 개인적인 수리 및 개조로 인한 고장 및 손실



www.7stage.co.kr

경기도 성남시 분당구 판교로 723 (야탑동) 분당테크노파크 B동 604-2호 TEL: 031-709-1061 FAX: 031-709-1062 제조·수입원: ㈜보아텍







# MYFIX

경기도 성남시 분당구 판교로 723 (야탑동) 분당테크노파크 B동 604-2호 세븐스테이지 T. 031-709-1061 F. 031-709-1062

